



INPUT FUSE MUST BE INSTALLED AS SHOWN. KEEP WIRES AS SHORT AS POSSIBLE.

THE "ALWAYS ON" OUTPUT CAN SUPPLY THE FULL CURRENT LOAD, IF IT IS NOT BEING USED, COVER THE END WITH ELECTRICAL TAPE OR HEAT SHRINK TUBING TO PREVENT SHORTS.

Title		
MES612-NG8A		
Size A	Document Number	Rev C
Date:	Sheet 1 of 1	1